


CASANOVO

VOGEL 100P140

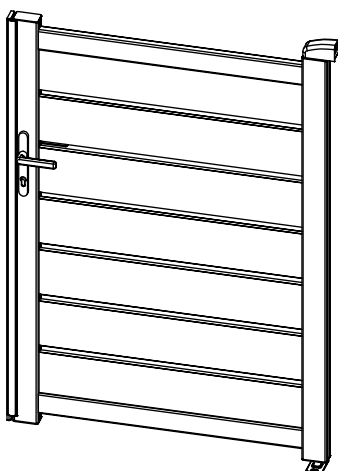


3-5H




X 2


EN FR DE ES PT IT NL PL FI SE DK
RO SI SK HU CZ HR GR LT LV




INSTRUCTION MANUAL / NOTICE DE MONTAGE / MONTAGEANLEITUNG / MANUAL DE MONTAJE / MANUAL DE MONTAGEM / MANUALE DI MONTAGGIO /
MONTAGEHANDLEIDING / INSTRUKCJA MONTAŻU / KÄYTTÖOHJEET / BRUGSANVISNING / BRUGSANVISNING / INSTRUCȚIUNI DE ASAMBLARE /
NAVODILA ZA SESTAVLJANJE / NÁVOD NA MONTÁŽ / ÖSSZESZERELÉSI ÚTMUTATÓ / NÁVOD K MONTÁŽI / UPUTE ZA INSTALACIJU /
ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ / SURINKIMO INSTRUKCIJOS / MONTĀŽAS INSTRUKCIJAS

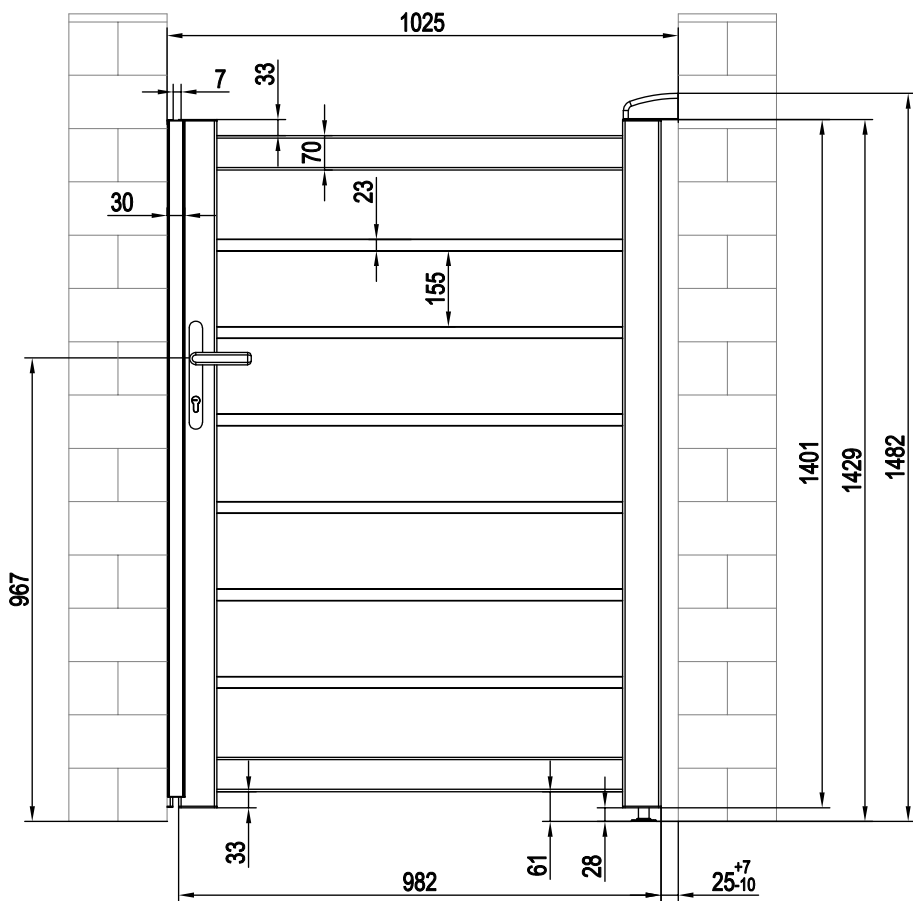


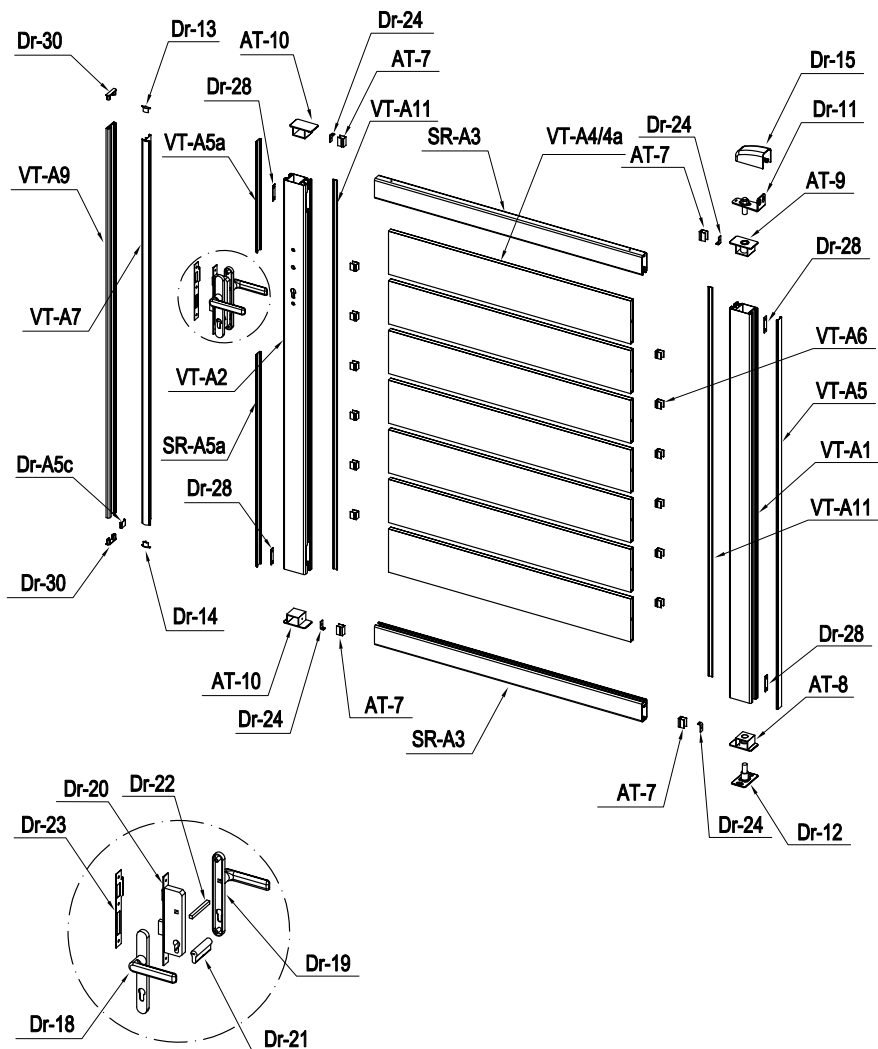


PART LIST


IMAGE	NO.	L.(mm)	QTY	IMAGE	NO.	L.(mm)	QTY
	VT-A1	1395	1		Dr-15		1
	VT-A2	1395	1		Dr-17		1
	VT-A9	1395	1		Dr-30		2
	SR-A3	959	2		Dr-31		2
	VT-A4	868	6		Dr-18		1
	VT-A4a (+SR-A15)	868	1		Dr-19		1
	VT-A5	1395	1		Dr-20		1
	VT-A5a	372.5	1		Dr-21		1
	SR-A5a	782	1		Dr-22		1
	Dr-A5c	19.5	1		Dr-23		1
	VT-A11	1395	2		Dr-24		4
	VT-A6	23	12		Dr-28		4
	AT-7	29.5	4		Dr-25		1
	VT-A7	1375	1		Dr-25a		2
	AT-8		1		Dr-26		3
	AT-9		1		Dr-27		2
	AT-10		2		VT-A30	ST4x10	4
	Dr-11		1		VT-A31	ST4.2x13	4
	Dr-12		1		VT-A32	M8x60	6
	Dr-13		1		VT-A33	ST5.5x38	8
	Dr-14		1		VT-A34	M6x50	3
					VT-A35	ST4.8x38	28

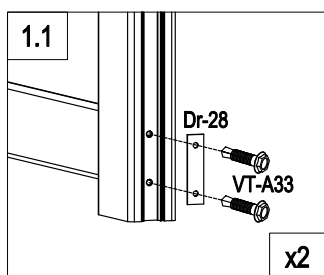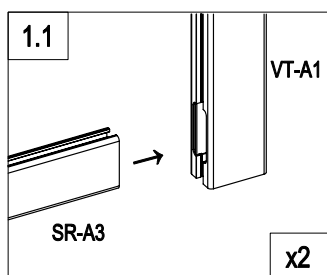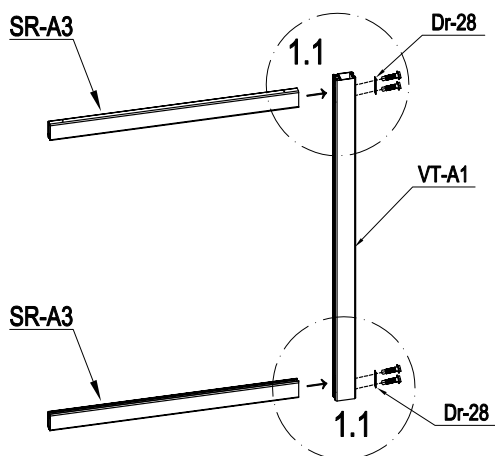




	VT-A1	1
	SR-A3	2
	Dr-28	2
	VT-A33	4

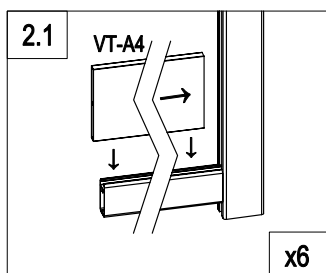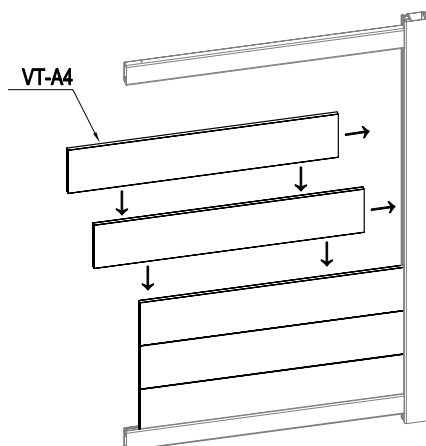




	VT-A4	6
---	-------	---

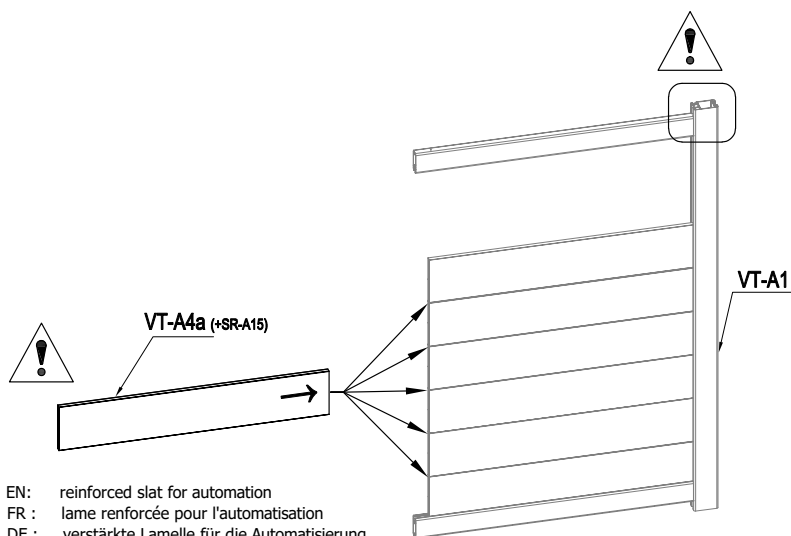


EN: reinforced slat for automation
 FR: lame renforcée pour l'automatisation
 DE: verstärkte Lamelle für die Automatisierung
 ES: Lámina reforzada para la automatización
 PT: ripa reforçada para automatização
 IT: lamella rinforzata per l'automazione
 NL: versterkte lat voor automatisering
 PL: wzmocniona listwa do automatyzacji

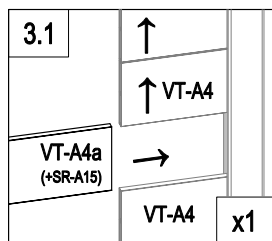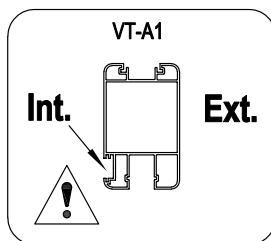
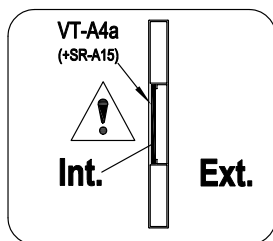


	VT-A4a (+SR-A15)	1
--	------------------	---

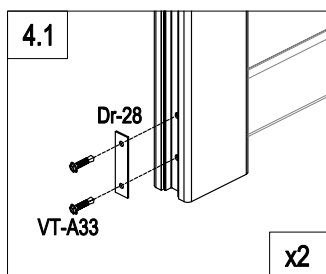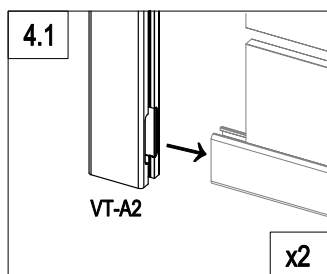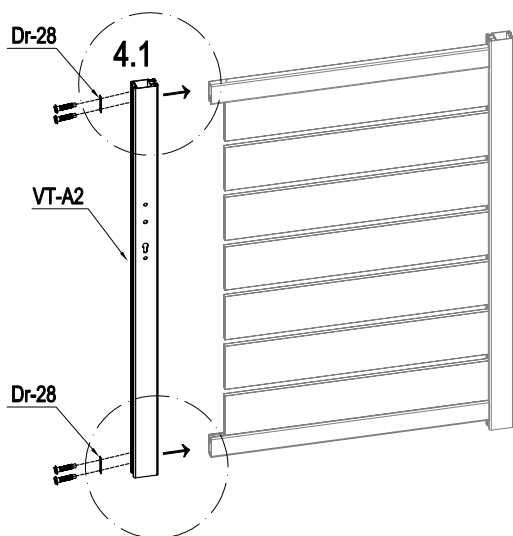


	VT-A2	1
	Dr-28	2
	VT-A33	4



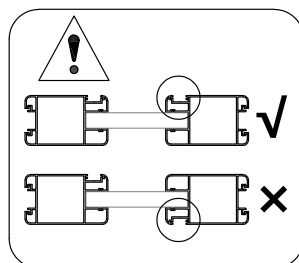


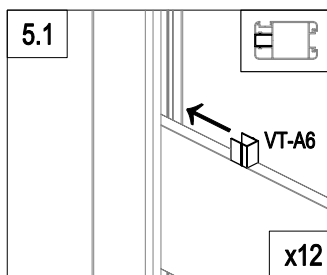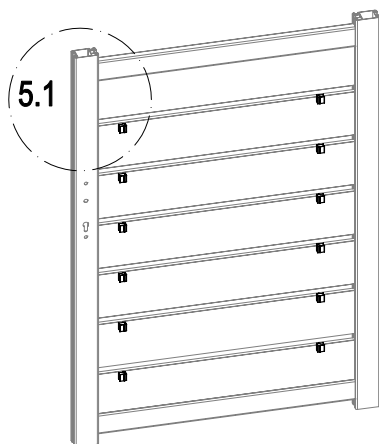




	VT-A6	12
---	-------	----

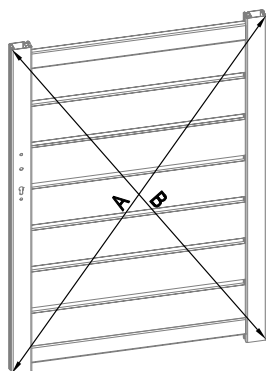





A=B

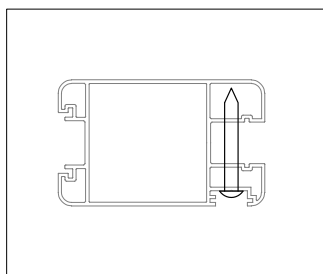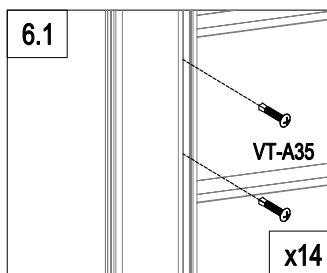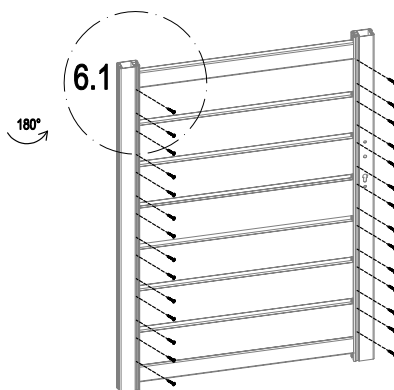


	VT-A35	28
---	--------	----


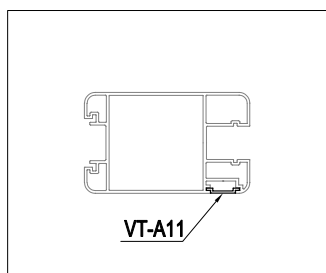
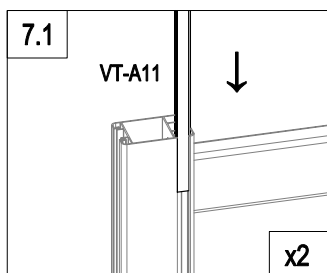
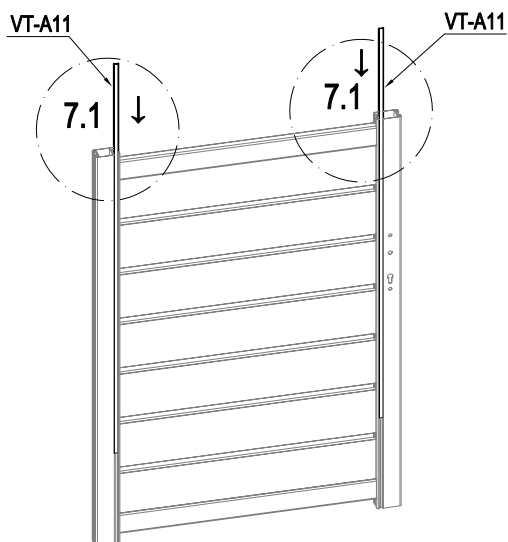


	VT-A11	2
---	--------	---

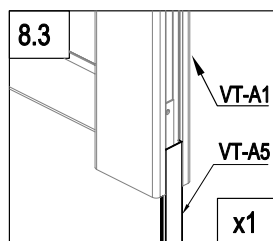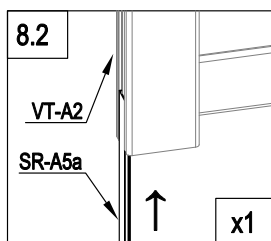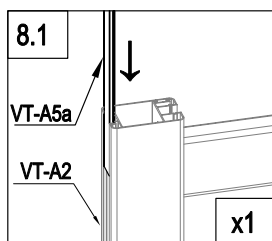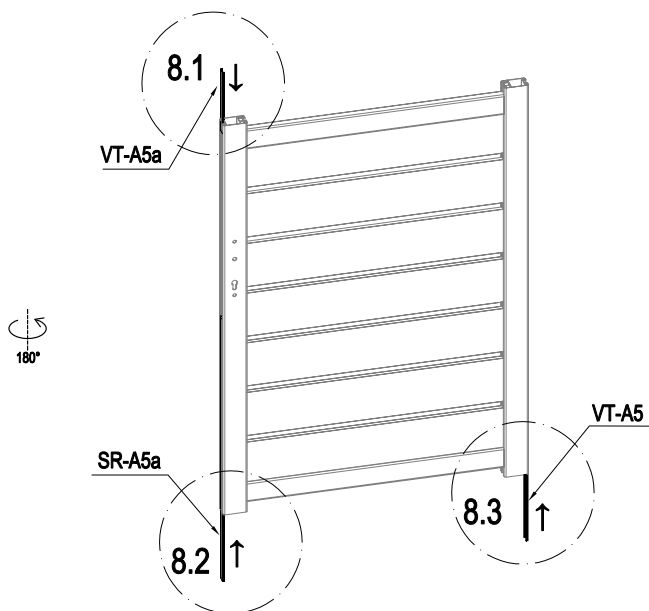





	VT-A5a	1
	SR-A5a	1
	VT-A5	1

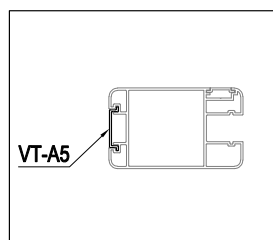

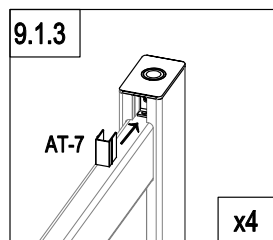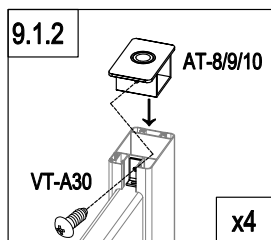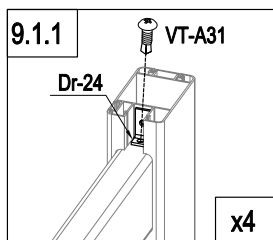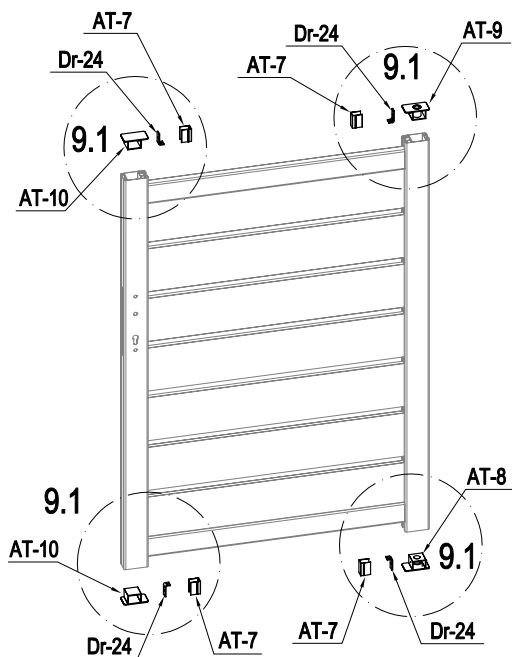






	AT-8	1
	AT-9	1
	AT-10	2
	Dr-24	4

	AT-7	4
	VT-A30	4
	VT-A31	4

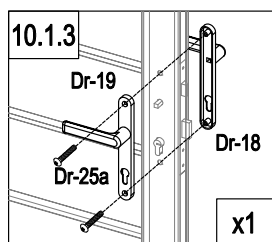
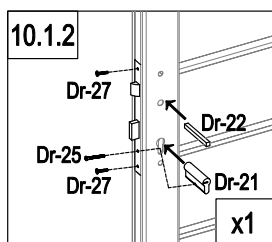
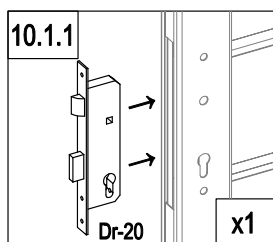
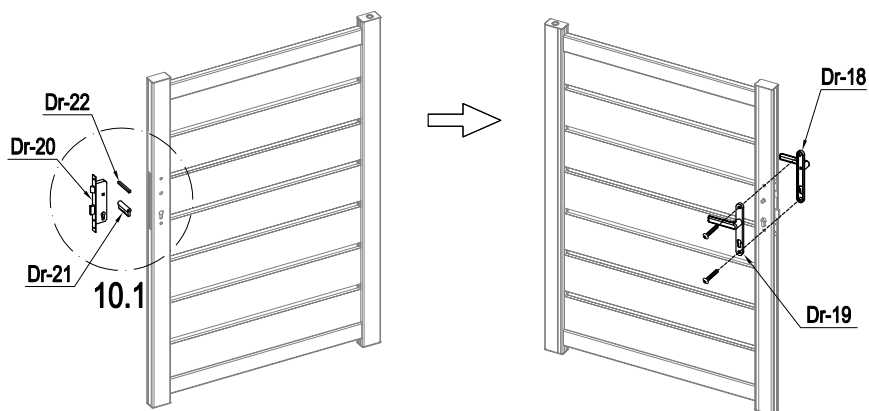


	Dr-20	1
	Dr-21	1
	Dr-22	1
	Dr-25	1


	Dr-18	1
	Dr-19	1
	Dr-25a	2
	Dr-27	2

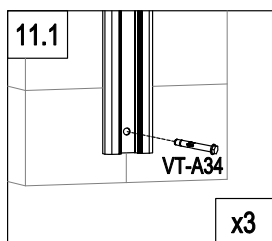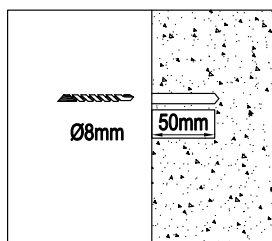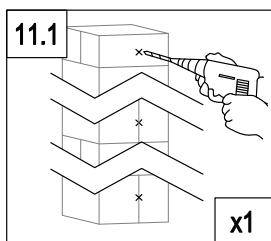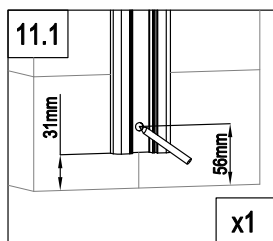
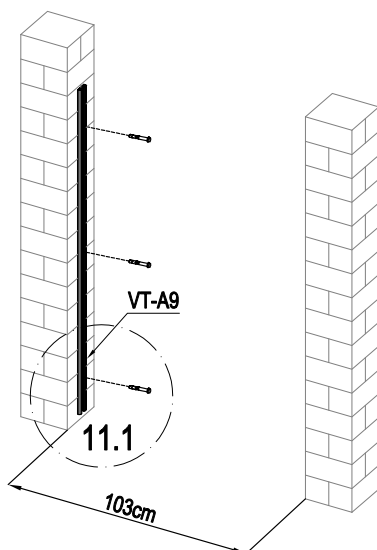


	VT-A9	1
	VT-A34	3

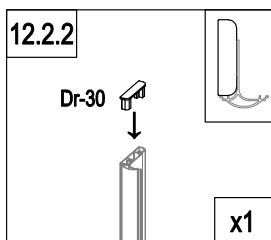
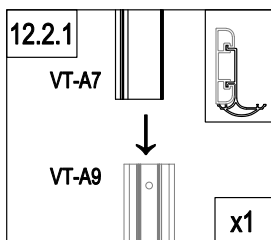
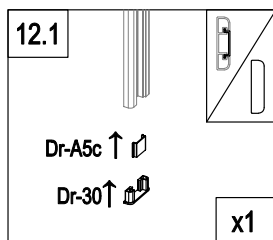
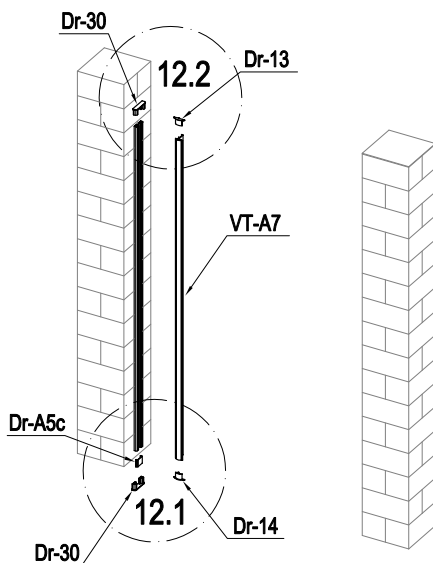


	VT-A7	1
	Dr-13	1
	Dr-14	1
	Dr-30	2
	Dr-A5c	1


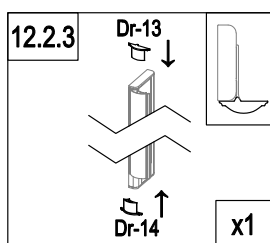







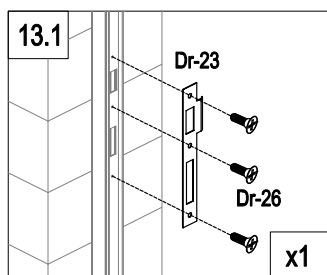
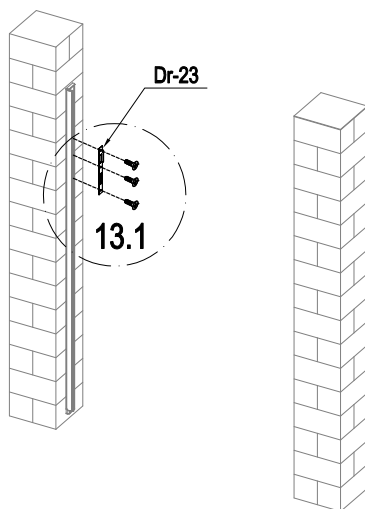


	Dr-23	1
	Dr-26	3




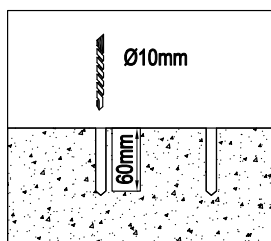
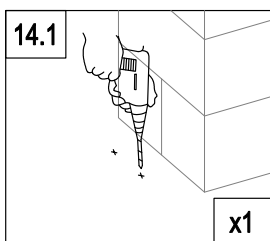
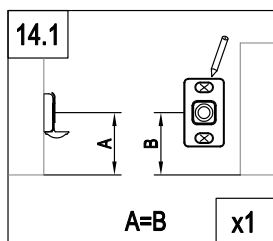
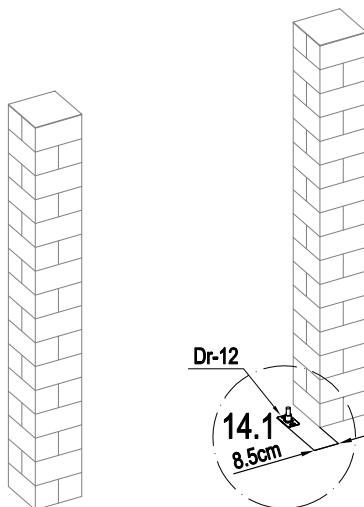






	Dr-12	1
	VT-A32	2

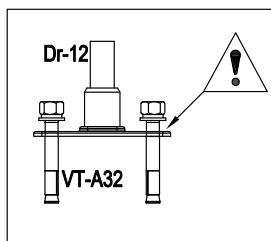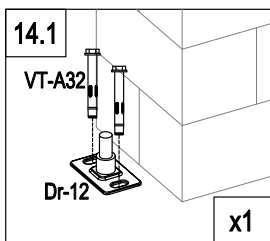

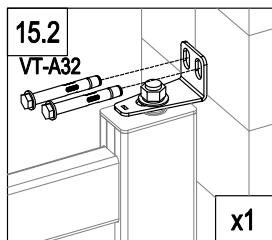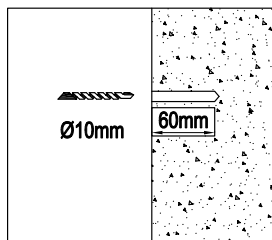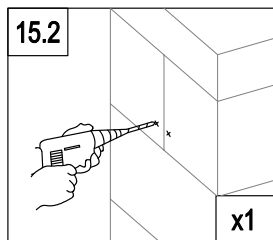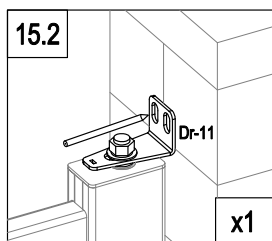
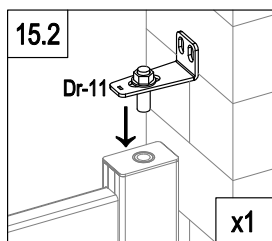
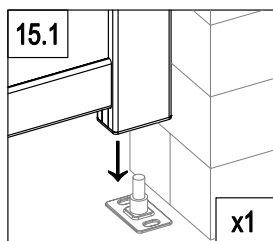
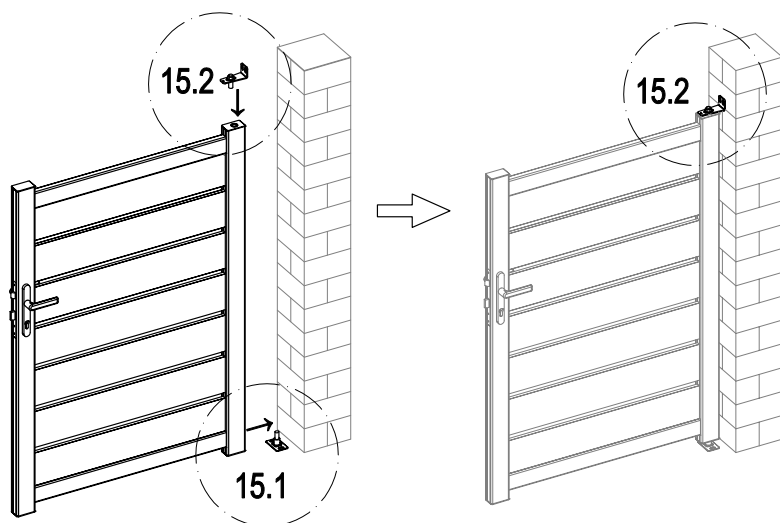


	Dr-11	1
	VT-A32	2

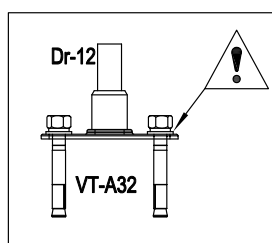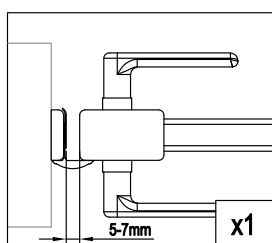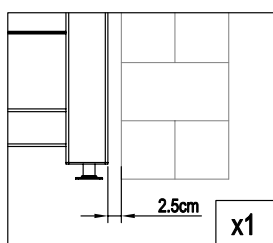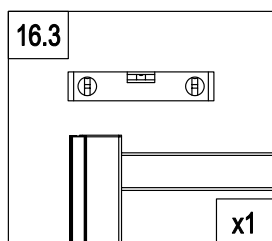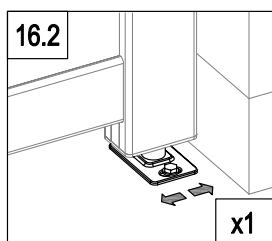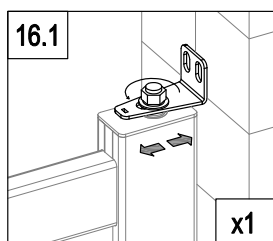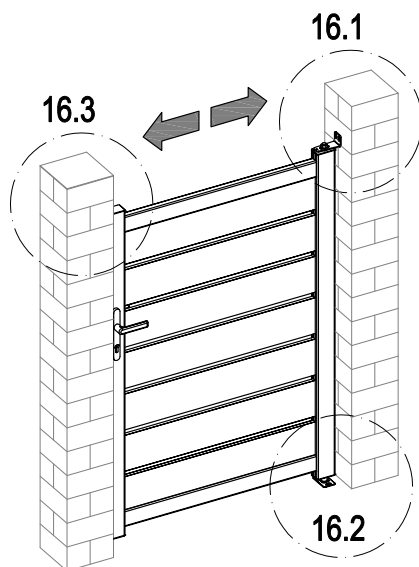

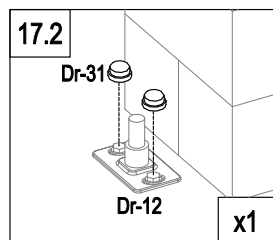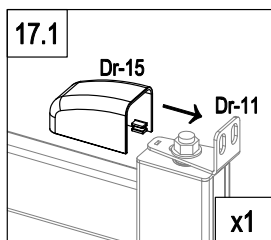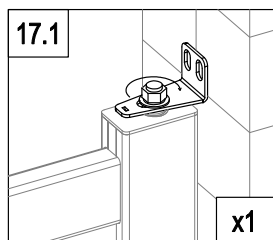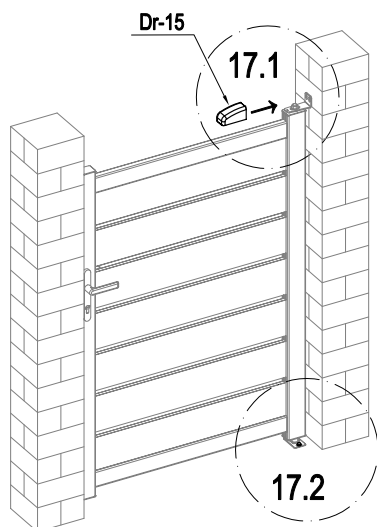

	Dr-15	1
	Dr-31	2

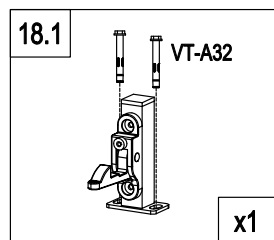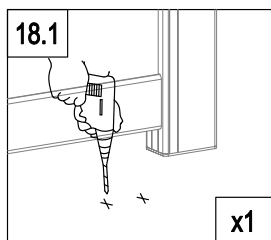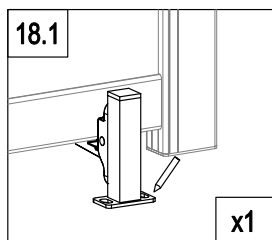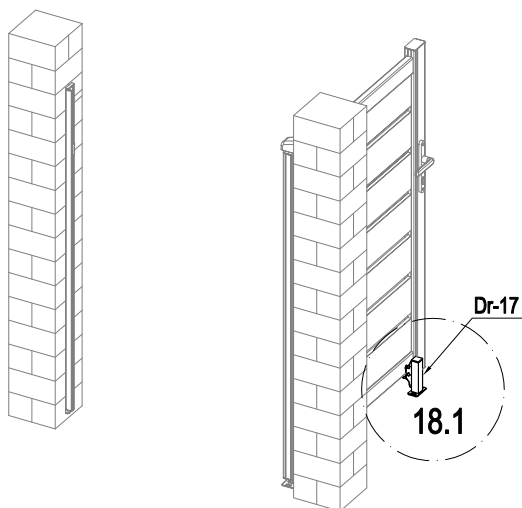

	VT-A32	2
	Dr-17	1